

Hoody Acoustic / Fire Hood

Fitting instructions for Acoustic / Fire hoods in plasterboard ceilings.

Please read through these instructions carefully to familiarise yourself with the fitting process before starting work.

1



Pass the cable through the speaker fitting aperture.

2



Grasp the firehood by its sides & squeeze it inwards to reduce its bulk. Then push it through the aperture with its top uppermost, ensuring that a grip on the fitting clips is maintained through the process.

3



Whilst holding a fitting clip, align the pin hole with the 12mm plasterboard & push one of the supplied pins through the hole & into the plasterboard. Use optional No.6 screws in 9mm plasterboard.

4




Using an inverted hammer handle (or similar blunt object), push it up in to the firehood & move it around to completely open out the cover.

5



6

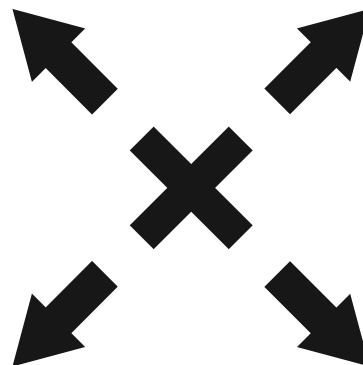

Cable entry can be under the hood material or through the marked entry hole in the side of the hood.

Allow 15 - 20mm clearance above the firehood and 30 - 40mm clearance all around.